

(PRF315300HW) Parts list

No.	Parts code	Description of Spare Part	Quantity
2	20122080033	Cover of door hinge screw hole	1
3	20122080090	Door hinge cover	1
4	3031400148	Upper hinge assembly	1
6	3020400135	Upper door gasket	1
7	3020500092	Upper door bar	1
8	2100150076	Upper door	1
9	20122090004	Right limit block of door	1
10	20122090010	Left limit block of door	1
11	2100150077	Lower door	1
12	20122090160	Lower door right aid-closer	1
13	20122090177	Lower door left aid-closer	1
14	3020400136	Lower door gasket	1
15	3031500055	Drink rack	1
16	3031500031	Lower door bar, long	1
17	3031500044	Lower door bar, short	1
19	2207400523	Crisper Box	1
20	20120030010	Crisper box cover	1
21	3039900264	Compressor support base	1
22	3050100117	Power supply cord	1
23	3040500011	Drier filter	1
24	20114070006	Connecting tube	1
25	2400100282	Compressor	1
26	3050200095	Earthing wire of compressor	1
27	20122990039	Drain pan	1
28	3040600005	Process tube	2
31	20122990016	Long adjustable Foot	1
32	20122990001	Short adjustable Foot	1
33	20120020226	Shelves of fridge	1
34	3031400067	Lower Door Hinge Assembly	1
35	20122010048	Lamp cover	1
36	2500500002	Lamp Bulb	1
37	20122010037	Knob	1
38	20122010002	Thermostat cover	1
39	2400200005	Thermostat	1
40	2500600001	Lamp holder	1
41	2501100002	Door switch	1
42	2208101188	Middle hinge cushion	1
43	3031400116	Middle hinge	1
300		Trademark	1
301		Carton	1
		Totally Quantity:	

Total Amount:

