



NO	DESCRIPTION	QTY
1	Handle decorative piece	1
2	handle	1
3	Door clip	1
4	Door glass	1
5	Damping rubber particles	2
6	panel	1
7	Thermostat knob	1
8	Heating tube	4
9	Pulley bracket	1
10	Left side panel	1
11	Upper plate	1
12	Support plate	1
13	Enhanced version	1
14	Right side panel	1
15	Wind leaf	1
16	Hood	1
17	housing	1
18	Back plate	1
19	4n-4 buckle	1
20	C distance bar	1
21	power cord	1
22	Hood motor	1
23	Stove foot pad	4
24	FEET	4
25	floor	1
26	Chip tray	1
27	Small connector	1
28	2. Door hook pulley	1
29	Adjustable temperature controller	1
30	Function switch	1
31	timer	1
32	Power switch knob	1
33	Indicator lamp cover	1
34	timer knob	1
35	Knob cover	3
36	Lower door clip	1
37	Doorpost	1
38	Door hook	1
39	holder	1
40	grill	1
41	Baking tray	1

NO	DESCRIPTION	QTY
32	Power switch knob	1
33	Indicator lamp cover	1
34	timer knob	1
35	Knob cover	3
36	Lower door clip	1
37	Doorpost	1
38	Door hook	1
39	holder	1
40	grill	1
41	Baking tray	1

120V/60Hz/1400W