


HOW TO OPERATE

Power (A) The fan functions ON and OFF by pressing the power button. Lights on the fan's control panel indicate the power is ON.

Fan Speed (B) The fan speed can be adjusted by pressing the SPEED button. Press the button to switch between the speed settings.

Timer (C) The fan has an automatic timer to turn the unit OFF at intervals of 1,2 or 8 hours. To set the timer, turn the unit on at the required speed, press the timer button until the desired run time is illuminated. The fan will turn off once the time has expired.

Oscillation (D) The oscillation feature can be activated by pressing the Oscillation button. The fan can be set to a stationary position by pressing the button again.

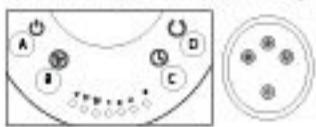

CLEANING



Unplug the unit before any cleaning activity.



To clean inlet and outlet ribs, use a common household vacuum. Do not use water to clean these parts of the Tower Fan. Do not disassemble for cleaning.



Do not use solvents.



To clean base, wipe with a damp cloth.



DESCRIPTION OF PARTS

1. Remote control
2. Carry Handle
3. Rear Grill
4. Front Grill
5. Rear Base
6. Front Base

DESCRIPCIÓN DE LAS PARTES

1. Control Remoto
2. Asa Para Fácil Transporte
3. Parrilla de Seguridad Trasera
4. Parrilla de Seguridad Fr3nte
5. Trasera de la base
6. Frontal de la base

TECHNICAL SPECIFICATIONS - ESPECIFICACIONES TÉCNICAS

Model - Modelo: PFT423R

Voltage - Voltaje: 120V 60Hz 60WATT

www.premiumlevella.com

IMPORTANT INSTRUCTIONS

Read and save these important safety instructions before using this fan, when using electrical appliances, basic safety precautions should always be followed including the following:

WARNING - To reduce the risk of fire or electrical shock, do not use this product with any solid state speed control device. To reduce the risk of fire or electric shock and injury to persons, do not use in a window.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user service instructions (follow marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

• Use this fan only as described in this manual. Other uses not recommended may cause fire or electric shock.

• This product is intended for HOUSEHOLD USE ONLY and not for commercial, industrial or outside use.

• To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.

• Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.

• Do not operate the fan in the presence of explosive and/or flammable fumes.

• Do not place the fan or any parts near an open flame, cooking or other heating appliance.

• Avoid contact with moving fan parts.

• To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.

• The use of attachments is not recommended and may cause hazards.

• Always use on a dry, level surface.

• Do not operate if the fan housing is removed or damaged.

• Do not operate any fan with a damaged cord or plug.

• Discard fan or return to an authorized service facility for examination and/or repair.

• Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

• The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

• Close supervision is necessary when any appliance is used by or near children. Children being supervised not to play with the appliance.

USER SERVICING INSTRUCTIONS

Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.


(A) Open fuse cover by sliding access cover on top of attachment plug towards plug blades.

(B) Remove fuse carefully by gently pulling out the ends of the fuse from the receptacle.

Risk of fire. Replace fuse only with 5 amp, 125 Volt fuse.

(C) Install replacement fuse by first placing the end of the fuse into the fuse receptacle which is opposite of the blades of the plug, then carefully push in the other end. Only push against the metal end of the fuse, not the glass center portion.

(D) Close fuse cover by sliding the cover back into the plug until it is completely closed and latches.

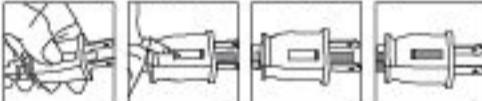


Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

ASSEMBLY INSTRUCTIONS

Pass the cord through the base. Assemble the two base halves together. Position the base half with the alignment pin, over the other base half with the alignment sockets. Press the two halves together until flush. (See figure A.)



Assemble the base to the tower bottom. With the tower on its side, align the 4 base sockets onto the tower bottom pins. Tighten the screws securely but do not over tighten.

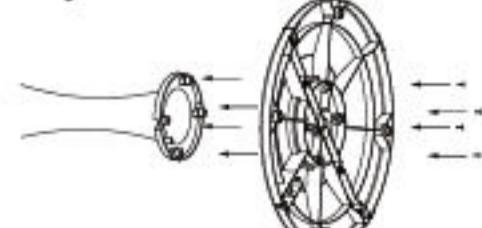

Model/Modelo: PFT423R

PREMIUM LEVELLA.

42" TOWER FAN VENTILADOR DE TORRE 107 CM



USER MANUAL / MANUAL DE INSTRUCCIONES

Use and care manual. Important safeguards. This product is for domestic use only.

Manual de uso y cuidado. Precauciones importantes. Este producto es para uso doméstico únicamente.

o la falta de experiencia y el conocimiento, a menos que hayan ha dado la supervisión o instrucción.

• Se requiere supervisión cercana cuando el aparato sea usado por cerca de niños. Los niños están supervisados por no jugar con el aparato.

INSTRUCCIONES DE REPARACIÓN PARA EL USUARIO

Tome el enchufe y quitele del receptáculo u otro aparato de conexión. No lo desenchufe tirando del cable.

(A) Abra la cubierta del fusible deslizando la tapa en la parte superior del enchufe hacia el lado de las patas.

(B) Remueva el fusible cuidadosamente haciendo una leve palanca con los extremos del fusible para quitarlo del receptáculo.

Riesgo de incendio. Reemplace el fusible únicamente con un fusible de 2.5 Amp, 125 Voltios.

(C) Para instalar el fusible de repuesto, coloque primero el extremo del fusible en el receptáculo que está frente a las patas del enchufe y luego presione el otro extremo hacia adentro. Presione solamente el extremo metálico del fusible, no la parte de vidrio central.

(D) Coloque la tapa de acceso al fusible deslizando la cubierta sobre el enchufe hasta que esté completamente cerrada y trabada.



Riesgo de incendio. No reemplace el enchufe. Contiene un dispositivo de seguridad (fuse) que no debe quitarse. Deseche el producto si el enchufe está dañado.

INSTRUCCIONES PARA ASEMBLAR

Pase el cable a través de la base. Ensamble las dos partes de la base. Coloque la parte de la base que posee la clavija de alineamiento sobre la otra parte de la base que posee el casquillo de alineamiento. Presione las dos partes hasta que se nivelen. (Ver Imagen A.)



Ensamble la base con la parte inferior de la torre. Coloque la torre sobre la base y alinee los 4 casquillos de la base con las clavijas de la parte inferior de la torre. Ajuste bien los tornillos, pero no los ajuste demasiado.

